Table-Top Personal Safety Partition
Assembly Instructions

STRIKE SHARPLY (THE MID-CONNECTOR) WITH WOODEN MALLET OR BOARD UNTIL THE FOOT ASSEMBLY IS FIRMLY ATTACHED TO THE PANEL ROD

MID-CONNECTOR

FOOT ROD

FOOT
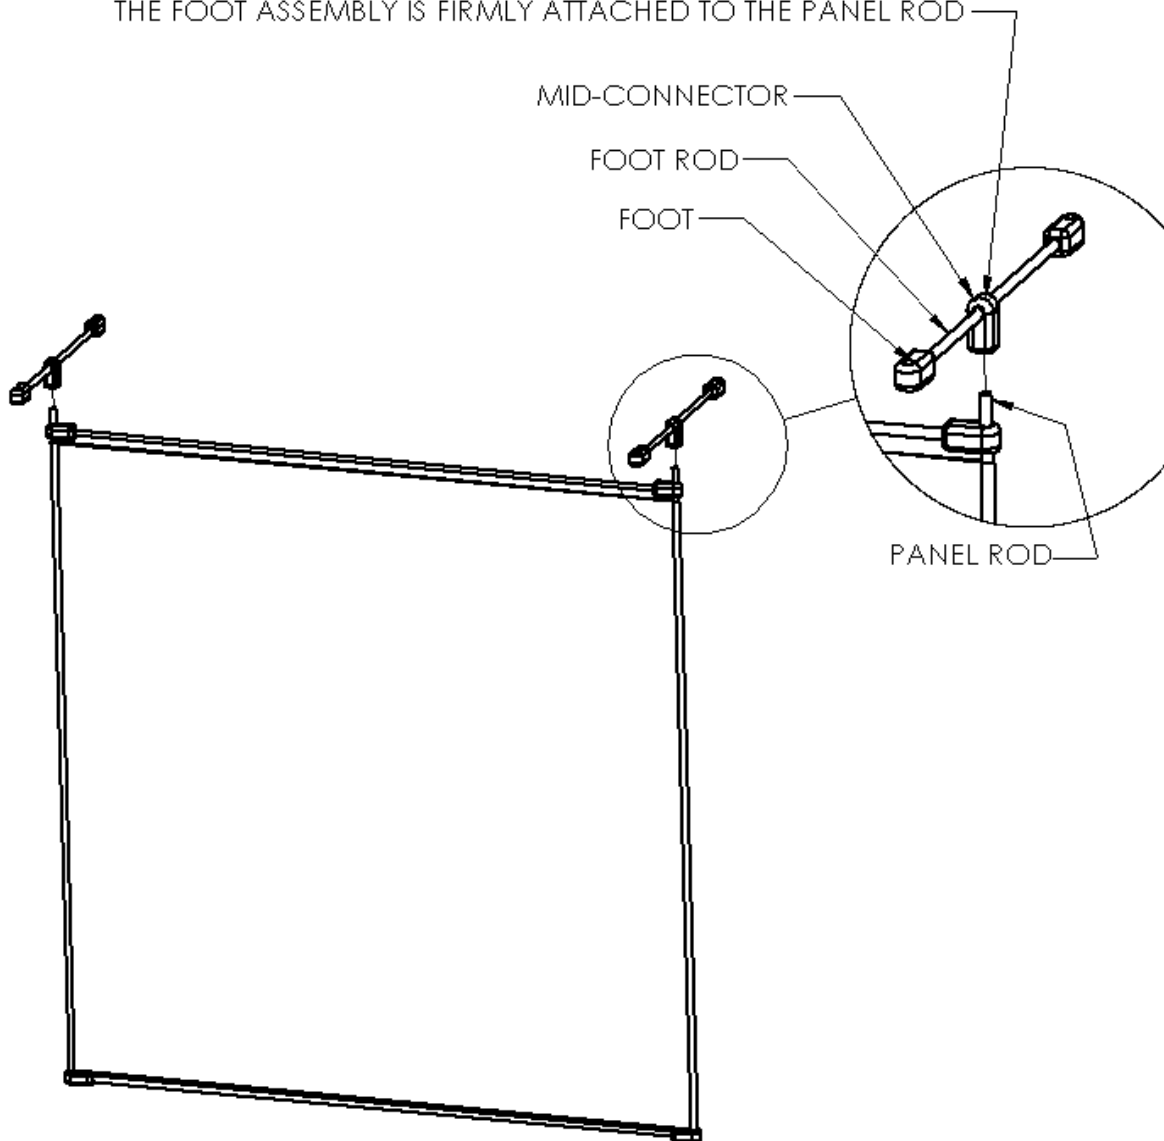
PANEL ROD

1. Stand the panel assembly on the floor or on a table as shown.
2. Using a non-metallic hammer, pound the Mid-Connector fully onto the Panel Rod.