


G2 CHAIN HOIST SERIES – PROJECTION MOUNTED COMMERCIAL VINYL DOOR INSTALLATION INSTRUCTIONS

READ THIS MANUAL CAREFULLY. OBSERVE WARNINGS AND PRACTICE CAUTION WHEN INSTALLING, OPERATING, OR MAINTAINING YOUR GOFF'S DOOR ASSEMBLY.



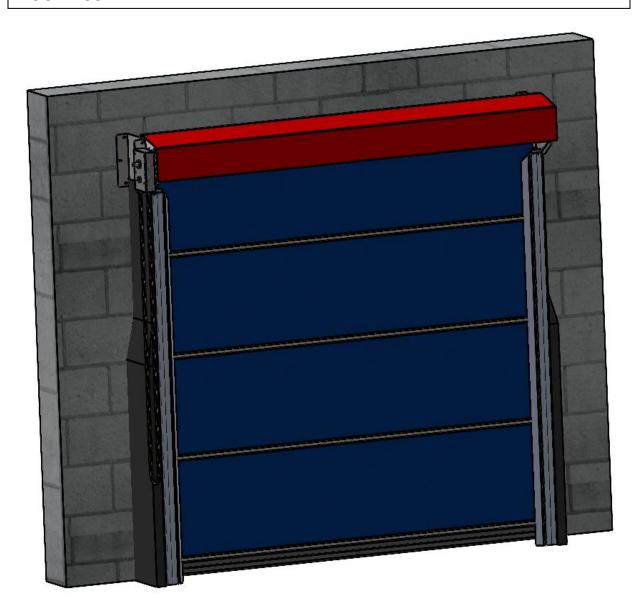


PREPARE MOUNTING SURFACE

- Measure the width the existing opening, or frame, near the top of the opening. Divide that overall width measurement in half to find and clearly mark the center at the top of the door frame or its header. (Figure 1 MEASURE/MARK OPENING)
- 2. Place the G2 Door Roll Header Assembly across a safe and level work surface, then rotate the roll assembly frame so that the Header Bracket mount flanges are facing upward. (Figure 2 MEASURE DOOR WIDTH).
- Measure the entire width of the Roll Header Assembly from the outermost edge of one Header Bracket mounting flange to the outermost edge of the opposite side. (Figure 2 MEASURE DOOR WIDTH)
- 4. Divide that number by 2 and measure to each side of the center mark from step 1. Mark a vertical line above the opening at these locations. This is where the outermost edges of the Header Bracket mount flanges will be. (Figure 3 MARK DOOR WIDTH ON WALL)
- 5. Set one of the Vertical Track Assemblies on your work surface and measure its overall length. Do not include the Transition piece in your measurement. Add ¼" to this number and take note. This is the height dimension needed to mark the location of the Header Bracket's bottom edge. With that number, mark a horizontal line on each side of the opening that intersects the previously drawn vertical line.

(Figure 4 MEASURE TRACK HEIGHT) (Figure 5 MARK TRACK HEIGHT)



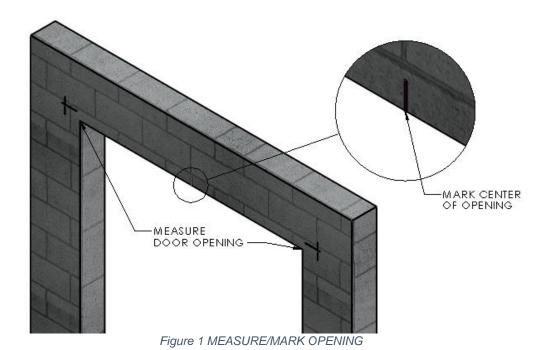

80018H00G2MAPMLHASSYMAINCHN




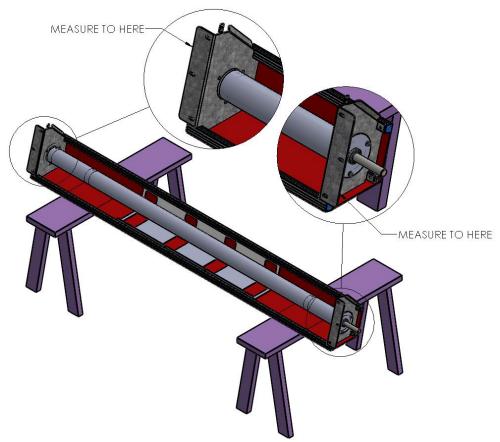


Figure 2 MEASURE DOOR WIDTH

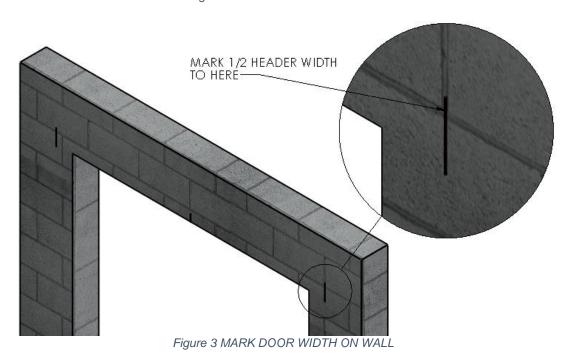

80018H00G2MAPMLHASSYMAINCHN



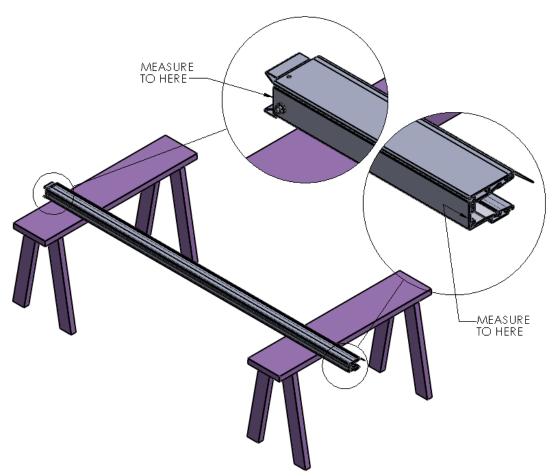


Figure 4 MEASURE TRACK HEIGHT

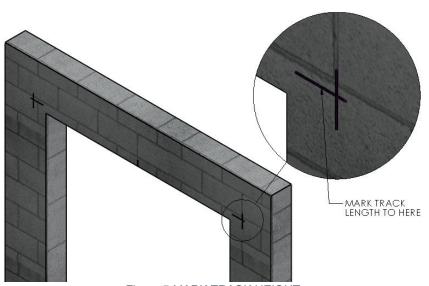


Figure 5 MARK TRACK HEIGHT



PROJECTION MOUNTED HEADER AND VERTICAL TRACKS

NOTE - See supplemental Instruction for:

"G2 Projection Mount Door and Track Assembly Installation Instructions".

CHECK ALL MOUNTINGS AND INSTALL OPERATOR

- 1. With everything mounted, take a moment to check all of your hardware, and all of the components for horizontal and vertical alignments.
- 2. Insert the provided 1/4" Sq. Key stock into the Chain Hoist Key Way, and slip the Chain Hoist Operator onto the 1" Dia. Drive Shaft.
- 3. Insert the 3" long Hex Bolt through the width of the Chain Hoist Operator, through the washer and the Anti-Rotation Bracket and loosely secure with the Nylon Hex Nut.
- 4. Secure the other end of the Anti-Rotation Bracket to the Aluminum Extrusion with the hardware provided in the end.
- 5. Tighten the 3" Hex Bolt/Nut.
- 6. Release the ties on the roll assembly.



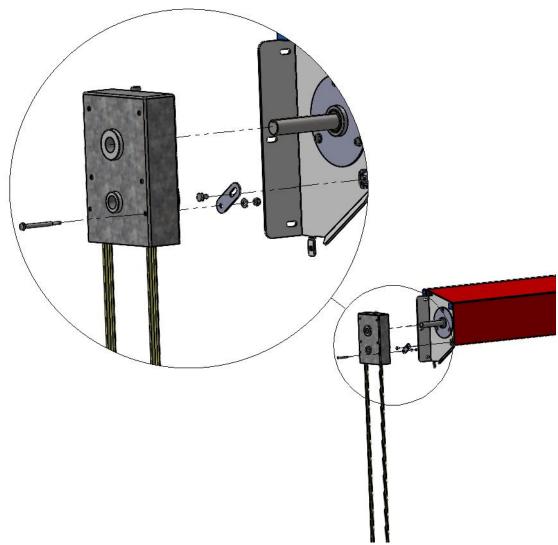


Figure 6 MOUNT ANTI-TORQUE BRACKET AND OPERATOR



WARNING

ALL INSTALLATION INSTRUCTIONS MUST BE FOLLOWED, AND CRITICAL ALIGNMENT REQUIREMENTS MUST BE MET.

- ENSURE THAT THE ROLL HEADER ASSEMBLY IS LEVEL, AND THAT THE TRACKS AND BRACKETS ARE ALL PLUMB, AND SQUARE-

OTHERWISE, THE PERFORMANCE AND CONSISTENT OPERATION OF YOUR DOOR WILL BE COMPROMISED.

LIMITED WARRANTY

G2 Doors



Goff's Enterprises, Inc. warrants all High-Performance Doors from failure in normal use due to defects in material or workmanship for a period of <u>THREE years</u> from date of purchase. This warranty includes <u>all parts and warranty related labor</u> as approved by Goff's Technical Support Team.

Goff's Enterprises, Inc. may elect to repair or replace defective or damaged goods.

Technical Support Team: 262-746-3374